

The information in this user's manual is subject to change without notice.

**DANGER**

**ONLY QUALIFIED ELECTRICAL PERSONNEL FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THIS EQUIPMENT AND THE HAZARDS INVOLVED SHOULD INSTALL, ADJUST, OPERATE, OR SERVICE THIS EQUIPMENT. READ AND UNDERSTAND THIS MANUAL AND OTHER APPLICABLE MANUALS IN THEIR ENTIRETY BEFORE PROCEEDING. FAILURE TO OBSERVE THIS PRECAUTION COULD RESULT IN SEVERE BODILY INJURY OR LOSS OF LIFE.**

**WARNING**

**THE USER MUST PROVIDE AN EXTERNAL, HARDWIRED EMERGENCY STOP CIRCUIT OUTSIDE THE CONTROLLER CIRCUITRY. THIS CIRCUIT MUST DISABLE THE SYSTEM IN CASE OF IMPROPER OPERATION. UNCONTROLLED MACHINE OPERATION MAY RESULT IF THIS PROCEDURE IS NOT FOLLOWED. FAILURE TO OBSERVE THIS PRECAUTION COULD RESULT IN BODILY INJURY.**

Ethernet™ is a trademark of Xerox Corporation.

Microsoft™, Windows™, Windows 95™, OS/2™, MS-DOS™, and WordPad™ are trademarks of Microsoft.

Multibus™ is a trademark of Intel.

AutoMate, Shark, AutoMax, Resource, and R-Net are trademarks of Rockwell Automation.

Reliance Electric is a trademark of Rockwell Automation, a core business of Rockwell International Corporation.

© 1998 Rockwell International Corporation