

17.0 ONLINE MENU: DELETING TASKS

You can delete one or all tasks in the rack using Delete function from the Online menu. Note that a task must be stopped before it can be deleted. The keyswitch must be in the PROGRAM position and the password must have been entered. You must have either rack access or task access to all of the tasks you want to delete. See 17.1 for deleting one task from the rack and 17.2 for deleting all tasks from the rack.

17.1 Deleting an Individual Task

To delete one task from the rack, follow the directions below.

1. Use the arrow keys to move the ">" pointer to the desired task.
2. Type "Enter" or <CR> to select the task. The selected task will be shown in reverse video.
3. Delete the task by entering "D" for Delete. The system will prompt you with "are you sure?" before deleting any tasks. Answer "Y" for yes and "N" for no. The deleted task will be erased from the AutoMax Processor or UDC module and will no longer appear on the display.

17.2 Deleting All Tasks from the Rack

To delete all tasks in the rack follow the directions below.

1. Enter "D" for Delete without selecting any tasks first.
2. Enter "A" to delete all tasks in the rack. The system will prompt you with "are you sure?" before deleting any tasks. Answer "Y" for yes and "N" for no. All tasks will be erased from the AutoMax Processors and UDC modules and will disappear from the display.