

19.0 ONLINE MENU: ERROR CLEAR

Any errors in the AutoMax Processor error log, the UDC error log, or on the AutoMax Processor LEDs should first be cleared if you wish to run any tasks on that particular Processor or UDC module. The Error Clear menu allows you to clear the error logs of AutoMax Processor modules and UDC modules as well as the LED fault codes on AutoMax Processor modules. This option simply clears the error log and the LEDs; it does not correct the errors themselves. Follow the steps below to clear a UDC error log, an AutoMax Processor error log, the LEDs on an AutoMax Processor, or the error log and LEDs for an AutoMax Processor.

1. From the Online menu shown in figure 11.1, select "E" for Error Clear.
2. Enter the slot number of the AutoMax Processor or UDC module whose error log you want to clear.
3. If you entered the slot number of a UDC module, select "E" to clear the error log.

If you entered the slot number of an AutoMax Processor, select "E" to clear the error log, "L" to clear the LEDs, or "B" to clear both the error log and LEDs.