

# **AutoMax<sup>®</sup>** **Programming Executive** **Version 4.2**

(M/N 57C605)

(M/N 57C606)

(M/N 57C607)

(M/N 57C625)

(M/N 57C626)

---

Instruction Manual J2-3102-2

---

 **Rockwell** Automation

---

**Reliance Electric**

The information in this user's manual is subject to change without notice.

### **DANGER**

**ONLY QUALIFIED ELECTRICAL PERSONNEL FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THIS EQUIPMENT AND THE HAZARDS INVOLVED SHOULD INSTALL, ADJUST, OPERATE, OR SERVICE THIS EQUIPMENT. READ AND UNDERSTAND THIS MANUAL AND OTHER APPLICABLE MANUALS IN THEIR ENTIRETY BEFORE PROCEEDING. FAILURE TO OBSERVE THIS PRECAUTION COULD RESULT IN SEVERE BODILY INJURY OR LOSS OF LIFE.**

### **WARNING**

**THE USER MUST PROVIDE AN EXTERNAL, HARDWIRED EMERGENCY STOP CIRCUIT OUTSIDE THE CONTROLLER CIRCUITRY. THIS CIRCUIT MUST DISABLE THE SYSTEM IN CASE OF IMPROPER OPERATION. UNCONTROLLED MACHINE OPERATION MAY RESULT IF THIS PROCEDURE IS NOT FOLLOWED. FAILURE TO OBSERVE THIS PRECAUTION COULD RESULT IN BODILY INJURY.**

Ethernet™ is a trademark of Xerox Corporation.

Microsoft™, Windows™, OS/2™ and MS-DOS™ are trademarks of Microsoft.

Multibus™ is a trademark of Intel.

dBASE III™ is a trademark of Ashton-Tate.

Sidekick™ is a trademark of Borland International.

VAX™ and VMS™ are trademarks of Digital Equipment Corporation.

Reliance®, AutoMate®, Shark®, and AutoMax® are registered trademarks of Reliance Electric Company or its subsidiaries.

ReSource™ and R-Net™ are trademarks of Reliance Electric Company or its subsidiaries.