

Table of Contents

1.0 Introduction	1-1
1.1 Manual Contents	1-1
1.2 Additional Information	1-3
1.3 Related Hardware and Software	1-4
1.4 Compatibility with Processors and Earlier Versions of the Programming Executive	1-5
1.4.1 Programming Executive and Operating System	1-5
1.4.2 Programming Executive Versions and Part Numbers	1-6
1.4.3 Programming Executive Feature Support	1-7
1.4.4 ASD and the Programming Executive	1-8
1.4.5 Converting from AutoMax Version 2 and Version 3	1-8
1.4.6 Network Communication	1-8
2.0 Introduction to the AutoMax Distributed Control System	2-1
2.1 ReSource AutoMax Programming Executive Overview	2-2
2.2 Introduction to Configuring Racks and Variables	2-4
2.3 Introduction to Creating Application Tasks	2-4
2.4 Introduction to Online Operations	2-6
2.5 AutoMax Help Screens	2-6
3.0 Notes on Installation	3-1
3.1 Installing and Running the Programming Executive Software on the Personal Computer	3-1
3.2 Installing a Mouse	3-2
3.3 Connecting the Personal Computer to an AutoMax Processor	3-2
3.3.1 Serial Connection	3-2
3.3.2 Using a PC Link Module	3-3
3.4 Connecting the Personal Computer to an AutoMax PC3000	3-3
3.5 User Ports	3-4
4.0 Getting Around in the AutoMax Executive	4-1
4.1 Making Selections	4-1
4.2 Directory Structure	4-1
4.3 Database Files	4-2
4.4 AutoMax File Types	4-3
4.5 Text Editor	4-4
4.6 Graphical Ladder Editor	4-4
5.0 Using the System Configurator	5-1
5.1 System Menu	5-2
5.1.1 Adding a System	5-2
5.1.2 Copying a System	5-3
5.1.3 Modifying System Information	5-4
5.1.4 Removing a System	5-4
5.1.5 Displaying System Information	5-4
5.1.6 Editing the Documentation File for a System	5-4
5.1.7 Printing System Files	5-5
5.1.8 Transferring a System	5-6
5.1.9 Importing a System from ASD	5-12

5.1.9.1	Module Types Recognized by the Import Procedure	5-12
5.1.9.2	Generic Modules	5-13
5.1.9.3	Accessibility of Variables Added by Import	5-13
5.1.9.4	Register Assignments on Modules Added by Import	5-13
5.1.9.5	Source Drive and Subdirectory for Import	5-14
5.1.9.6	Procedure for Importing an ASD System	5-14
5.1.10	Selecting All Systems	5-15
5.1.11	Generating Network Cross Reference Files	5-15
5.1.12	Using System Tokens and Token Passwords	5-16
5.1.13	Using Version Control Library	5-16
5.1.14	Exiting AutoMax Executive V4.x	5-16
5.1.15	About	5-16
5.2	Section Menu	5-16
5.2.1	Adding a Section	5-16
5.2.2	Copying a Section	5-17
5.2.3	Modifying Section Information	5-19
5.2.4	Removing a Section	5-19
5.2.5	Displaying Section Information	5-19
5.2.6	Editing the Documentation File for a Section	5-19
5.2.7	Printing Section Files	5-20
5.2.8	Transferring a Section	5-21
5.2.9	Selecting All Sections	5-22
5.2.10	Using Version Control Library	5-22
5.3	Rack Menu	5-22
5.3.1	Adding a Rack	5-23
5.3.2	Copying a Rack	5-23
5.3.3	Modifying Rack Information	5-25
5.3.4	Removing a Rack	5-25
5.3.5	Displaying Rack Information	5-25
5.3.6	Editing the Documentation File for a Rack	5-25
5.3.7	Generating a Rack Configuration Listing	5-26
5.3.8	Generating Rack Cross Reference Files	5-27
5.3.9	Printing Rack Files	5-31
5.3.10	Transferring a Rack Using the Transfer Command	5-32
5.3.11	Transferring a Rack Using Transfer-Plus	5-34
5.3.12	Importing a Rack from AutoMax Version 1 or Version 2	5-35
5.3.12.1	Module Types Recognized by the Rack Import Procedure	5-36
5.3.12.2	Generic Modules	5-36
5.3.12.3	Accessibility of Variables Added by Import	5-36
5.3.12.4	Register Assignments on Modules Added by Import	5-37
5.3.12.5	Source Drive and Subdirectory for Import	5-37
5.3.12.6	Procedure for Importing a Rack	5-37
5.3.13	Selecting All Racks	5-38
5.3.14	Configuring Racks	5-38
5.3.15	Creating Application Tasks	5-38
5.3.16	Using System Tokens and Token Passwords	5-38
5.3.17	Using Version Control Library	5-39

5.4	Commands Menu	5-39
5.4.1	Editing DOS Files	5-39
5.4.2	Viewing a File	5-40
5.4.3	Loading Operating Systems	5-40
5.4.3.1	Procedure for Loading All Operating Systems to the Rack	5-42
5.4.3.2	Loading the AutoMax Operating System to All Drops on One or All Networks	5-45
5.4.4	Erasing Operating Systems	5-46
5.4.5	Repairing Databases	5-47
5.5	Setup Menu	5-47
5.5.1	Modifying the Windows Configuration	5-47
5.5.2	Modifying the AutoMax Executive Configuration with Setup	5-47
5.5.3	Modifying the Online Communication Configuration	5-49
5.5.4	Modifying the Print Configuration	5-50
5.6	Online Menu	5-50
5.6.1	Accessing Online Functions	5-50
5.6.2	Monitoring a PC Program Online	5-51
6.0	Configuring Racks	6-1
6.1	Adding a Module to a Rack	6-3
6.2	Adding a Remote I/O Network	6-6
6.2.1	Configuring a Remote AutoMax Rack	6-7
6.2.2	Configuring Remote Heads	6-7
6.2.3	Configuring a Remote Shark Rack	6-8
6.3	Adding a Foreign Module or Other Unsupported Module	6-9
6.4	Configuring Drive Parameters	6-9
6.5	Copying a Module	6-9
6.6	Modifying Module Information	6-10
6.7	Removing a Module from a Rack	6-10
6.8	Moving a Module to Another Slot in the Rack	6-11
6.9	Displaying Module Information	6-12
6.10	Repairing a Rack Configuration	6-12
6.11	GoTo Menu	6-13
6.11.1	Locating a Variable by Name	6-13
6.11.2	Zooming In and Zooming Out	6-13
6.11.3	Selecting a Drive (DPS systems only)	6-14
6.12	Jumping to Another Rack	6-15
6.13	Substituting Variable Names	6-15
6.14	Substituting Variable Descriptions	6-16
6.15	Copying a UDC Drive (DPS systems only)	6-17
6.16	Generating the Rack Configuration and Drive Parameter Files	6-18
6.16.1	Generating the Rack Configuration	6-18
6.16.2	Generating the Drive Parameter Files	6-19
6.17	Accessing the Variable Configurator	6-19
7.0	Configuring Variables	7-1
7.1	Variables That Must Be Configured	7-1
7.1.1	Configuring I/O Variables	7-2
7.1.2	Configuring Common Memory Variables	7-2

7.2 Forms Used for Configuring Variables	7-3
7.2.1 Basic I/O and Interface Module Configuration Form	7-3
7.2.2 Common Memory Variable Configuration Form	7-3
7.2.3 Network Interface Module Configuration Form	7-4
7.3 Register Views and Register Pages	7-7
7.4 Entering Variable Names and Descriptions	7-7
7.5 Configuring I/O for a Foreign Module	7-10
7.6 Modifying Variable Names and Descriptions	7-10
7.7 Variables Menu	7-10
7.7.1 Cutting/Copying and Pasting Variable Names and Descriptions	7-10
7.7.1.1 Copying Variable Names to Other Registers on the Same Module	7-11
7.7.1.2 Copying Variable Names to Registers on Another Module	7-11
7.7.1.3 Copying Variable Names into Task Files	7-12
7.7.2 Updating the Database	7-12
7.7.3 Using the Start Over Command	7-12
7.7.4 Deleting Variable Names and Descriptions	7-12
7.7.5 Naming I/O Points Automatically	7-13
7.7.6 Substituting Variable Names	7-14
7.7.7 Linking Network-Wide and Local Names	7-15
7.7.8 Selecting All Variables	7-15
7.8 GoTo Menu	7-16
7.8.1 Selecting the Variable Range Displayed	7-16
7.8.2 Locating a Variable by Name	7-16
8.0 Creating and Editing Tasks with the Task Manager	8-1
8.1 Adding a Task (Program)	8-3
8.2 Copying a Task	8-5
8.3 Modifying Task Information	8-6
8.4 Removing a Task	8-6
8.5 Displaying Task Information	8-6
8.6 Editing a Task	8-6
8.7 Compiling a Task	8-7
8.8 Verifying Tasks	8-8
8.9 Editing the Documentation File for a Task	8-8
8.10 Transferring Task Files	8-9
8.11 Printing Task Files	8-12
8.12 Generating Task Cross Reference Files	8-13
8.13 Generating a PC Listing	8-13
8.14 Resequencing a Task	8-13
8.15 Selecting All Tasks	8-14
8.16 Using Version Control Library	8-14
8.17 Commands Menu	8-14
8.17.1 Editing DOS Files	8-14
8.17.2 Viewing Task Files	8-14
8.17.3 Purge Files	8-14
8.17.4 Generating the Rack Configuration and Drive Parameter Files	8-15
8.17.4.1 Generating the Rack Configuration	8-15
8.17.4.2 Generating the Drive Parameter Files	8-16

8.17.5 Jumping to Another Rack	8-16
8.18 Setup Menu	8-16
8.19 Online Menu	8-16
8.19.1 Accessing Online Functions	8-16
8.19.2 Monitoring a PC Program Online	8-16
9.0 System Security	9-1
9.1 Keyswitch	9-1
9.1.1 PROTECT Position	9-1
9.1.2 SETUP Position	9-1
9.1.3 PROGRAM Position	9-1
9.2 Password and Access Levels	9-2
9.2.1 Changing the Password in the AutoMax Operating System File	9-4
9.2.2 Changing the Password in a Rack	9-5
10.0 AutoMax Processor Overview	10-1
10.1 Single Processor Module in a Rack	10-1
10.2 Additional Data Storage in a Rack Containing a Single Processor Module	10-2
10.3 Multiple Processor Modules in a Rack	10-2
10.4 Battery Back-Up	10-3
10.5 Module Watchdog Circuitry	10-3
10.6 Processor Module Serial Ports	10-4
10.7 Status Indicators	10-4
10.8 Power-Up Initialization	10-4
10.9 Run-Time Diagnostics	10-5
10.10 Status Codes	10-5
10.11 Shut-Down Faults	10-5
10.12 Stop-All Faults	10-5
10.13 Forcing a Cold Start/Deleting Operating Systems	10-6
10.14 Stopping and Re-Starting AutoMax and UDC Tasks in the Rack	10-7
10.15 System Re-Initialization	10-8
11.0 AutoMax Online Menu	11-1
11.1 Online Menu Options	11-2
11.2 Online Menu Security	11-2
11.3 Online Menu Display	11-2
12.0 Online Menu: Connect	12-1
12.1 Changing the Baud Rate	12-1
12.2 Setting Access	12-2
12.3 Releasing Access	12-3
12.4 Setting AUTO-RUN	12-3
12.4.1 Application Tasks Not Re-Started with AUTO-RUN	12-4
12.4.2 Application Task AUTO-RUN and Memory Fragmentation	12-4
12.5 Setting the Drop Number for a PC3000 Rack	12-5
12.6 Connecting to a Network or a Local Rack	12-5
12.6.1 Direct Communication with the Local Rack	12-5
12.6.2 Network Communication	12-5
12.7 Displaying the Network Connection Table	12-7

13.0 Online Menu: Info/Log	13-1
13.1 Info/Log Processor and UDC Information Display	13-1
AutoMax Processor or PC3000 Processor	13-1
UDC Module	13-3
13.2 Info/Log Task Information Display	13-4
14.0 Online Menu: Transfer	14-1
14.1 Changing the Default Path	14-1
14.2 Directory of the Default Path	14-2
14.3 Loading the Rack Configuration, Drive Parameters, and Tasks onto the Rack	14-2
14.3.1 Utility Tasks	14-4
14.4 Saving Tasks from the Rack	14-4
14.4.1 Save Option: /All	14-4
14.4.2 Save Option: /Tunable	14-5
14.4.3 Save Option: /Include	14-5
14.4.4 Save Option: /Log	14-5
14.5 Recovering a Rack	14-5
15.0 Online Menu: Running Tasks	15-1
15.1 Running an Individual Task	15-2
15.2 Running All Tasks in the Rack	15-2
16.0 Online Menu: Stopping Tasks	16-1
16.1 Stopping an Individual Task	16-1
16.2 Stopping All Tasks in the Rack	16-1
17.0 Online Menu: Deleting Tasks	17-1
17.1 Deleting an Individual Task	17-1
17.2 Deleting All Tasks from the Rack	17-1
18.0 Online Menu: Monitoring and Editing Tasks	18-1
18.1 Monitoring and Modifying Variables	18-3
18.1.1 Displaying a Variable	18-4
18.1.2 Clearing a Variable from the Display	18-5
18.1.3 Saving a Monitor Variable Display List	18-5
18.1.4 Recalling a Monitor Variable Display List	18-5
18.1.5 Locating a Variable or I/O Address	18-6
18.1.6 Modifying a Variable	18-7
18.1.6.1 Setting a Variable to a Specific Value	18-8
18.1.6.2 Tuning a Variable	18-9
18.1.6.3 Forcing a Variable	18-10
18.1.6.4 Unforcing Variables	18-11
18.2 Monitoring and Modifying I/O	18-11
18.2.1 Monitor I/O Screen Display	18-12
18.2.2 Displaying I/O Registers	18-13
18.2.2.1 Displaying Local I/O	18-13
18.2.2.2 Displaying Remote I/O	18-13
18.2.3 Clearing I/O Registers from the Display	18-14
18.2.3.1 Clearing a Single Display	18-14
18.2.3.2 Clearing the Entire Display	18-14
18.2.4 Saving a Monitor I/O Display List	18-14

18.2.5	Recalling a Monitor I/O Display List	18-14
18.2.6	Locating a Variable or I/O Address	18-15
18.2.7	Modifying I/O Registers	18-16
18.2.7.1	Modifying Local I/O Registers	18-16
18.2.7.2	Modifying Remote I/O Registers	18-17
18.3	Outputting Analog Signals	18-17
18.3.1	Monitor Analog Display	18-18
18.3.2	Outputting a Variable	18-18
18.4	Monitoring and Editing PC Tasks	18-19
18.5	Forcing Variables	18-19
18.5.1	Monitor Force Screen Display	18-19
18.5.2	Forcing a Variable	18-20
18.5.3	Unforcing a Variable	18-21
18.6	Setting Up the UDC and PMI Meter Ports	18-22
19.0	Online Menu: Error Clear	19-1
20.0	Software Troubleshooting	20-1
20.1	Memory Errors	20-1
20.2	Disk Errors	20-1
20.3	Database Problems	20-2
20.4	Module/Variable Compatibility Problems	20-3
20.5	Printing Problems	20-3
20.6	System Errors	20-3

Appendices

Appendix A	
Processor Module Ports Programmer/Port B	A-1
User Serial Ports	A-2
Appendix B	
Processor Module Error and Status Codes	B-1
Appendix C	
AutoMax Task Execution	C-1
Appendix D	
Limitations on Object File Size	D-1
Appendix E	
Database Definitions	E-1
Appendix F	
Importing Racks from Systems Containing Network (.NET) Files ..	F-1
Appendix G	
Using Foreign Modules in an AutoMax Rack	G-1
Appendix H	
Quickstart Guide	H-1
Appendix I	
Import Notes	I-1
Appendix J	
Tokens and Locking	J-1
Appendix K	
Version Control Library (VCL)	K-1
Appendix L	
New Features in This Release	L-1
Appendix M	
Part Numbers of UDC Operating System Versions	M-1
Appendix N	
What Can Go Wrong When Loading Tasks and Files	N-1
Appendix P	
The Edit Configuration File Utility	P-1

List of Figures

Figure 2.1 - AutoMax Menu Map	2-3
Figure 5.1 - System Configurator Menus	5-1
Figure 5.2 - Add System	5-2
Figure 5.3 - Copy System Dialog Box	5-3
Figure 5.4 - Modify Destination System Dialog Box	5-4
Figure 5.5 - System Print Dialog Box	5-5
Figure 5.6 - Transferring a System Using Transfer	5-10
Figure 5.7 - Transferring a System Using Transfer-Plus	5-11
Figure 5.8 - Network Cross Reference	5-15
Figure 5.9 - Add Section	5-17
Figure 5.10 - Copy Section Dialog Box	5-18
Figure 5.11 - Modify Destination Section Dialog Box	5-18
Figure 5.12 - New Rack Name Dialog Box	5-19
Figure 5.13 - Print Section Dialog Box	5-20
Figure 5.14 - Transfer Section	5-22
Figure 5.15 - Add Rack	5-23
Figure 5.16 - Copy Rack Dialog Box	5-24
Figure 5.17 - Modify Destination Rack Dialog Box	5-25
Figure 5.18 - Rack Configuration Listing	5-26
Figure 5.19 - Rack Cross Reference	5-28
Figure 5.20 - Print Rack Dialog Box	5-31
Figure 5.21 - Transfer Rack	5-33
Figure 5.22 - Transferring a Rack Using Transfer-Plus	5-35
Figure 5.23 - Edit a File	5-39
Figure 5.24 - View a File	5-40
Figure 5.25 - Load Operating System to a Multibus Rack	5-44
Figure 5.26 - AutoMax Setup	5-48
Figure 5.27 - Communication Setup	5-49
Figure 6.1 - Rack Configurator Menus	6-2
Figure 6.2 - Adding a Module, Part 1	6-3
Figure 6.3 - Adding a Module, Part 2	6-5
Figure 6.4 - Remote I/O Network Diagram	6-6
Figure 6.5 - Copy Module Dialog Box	6-10
Figure 6.6 - Zoom In	6-14
Figure 6.7 - Substitute Variables Dialog Box	6-16
Figure 6.8 - Substitute Descriptions Dialog Box	6-17
Figure 6.9 - Copy Drive Dialog Box	6-18
Figure 7.1 - Configuring Drop Areas 1-55 in Network Interface Modules	7-5
Figure 7.2 - Variable Configurator Menus	7-8
Figure 7.3 - Substitute Variable Names	7-14
Figure 8.1 - Task Manager Menus	8-1
Figure 8.2 - Add New Task	8-5
Figure 8.3 - Copy a Task Dialog Box	8-5
Figure 8.4 - Transferring Task Files Using Transfer	8-10
Figure 8.5 - Transferring Task Files Using Transfer-Plus	8-11
Figure 8.6 - Print Tasks Dialog Box	8-12
Figure 10.1 - Rack Slot Numbers	10-2
Figure 11.1 - Online Task Manager Menu	11-1
Figure 11.2 - Online Menu Display with Task Running	11-3

Figure 12.1 - CONNECT Menu	12-1
Figure 12.2 - Online Connect Network Menu (Select Network)	12-6
Figure 12.3 - Online Connect Network Menu (Select Network Rack)	12-7
Figure 12.4 - Network Connection Table	12-8
Figure 13.1 - Info/Log Processor Information Display	13-1
Figure 13.2 - Info/Log PC3000 Information Display	13-2
Figure 13.3 - Info/Log UDC Information Display	13-3
Figure 13.4 - Info/Log Task Information Display	13-4
Figure 14.1 - Transfer Menu	14-1
Figure 15.1 - Run All Display	15-3
Figure 18.1 - Monitor Menu	18-1
Figure 18.2 - Monitor Variable Sub-Menu	18-3
Figure 18.3 - Variable Display Format	18-4
Figure 18.4 - Monitor Variable Modify Menu	18-8
Figure 18.5 - Monitor I/O Menu	18-12
Figure 18.7 - Monitor Force Menu	18-20
Figure 18.8 - Sample Monitor Force Display	18-21
Figure 18.9 - UDC Setup Screen	18-23
Figure P.1 - Text Edit Config Dialog Box	P-2

List of Tables

Table 1.1- Part Numbers for Versions of the AutoMax Operating System	1-6
Table 1.2- Features Supported by Versions of the AutoMax Programming Executive	1-7
Table 5.1- Rack Cross Reference Warning and Error Reports	5-30
Table 9.1- Accessing Password-Protected Features	9-3
Table 12.1- Setting Access	12-2
Table 16.1- Status of Data in the AutoMax Rack after a STOP-ALL Command or STOP-ALL Fault	16-2
Table 18.1- Meter Port Setup Retention	18-22