

37.0 TRANSITION

This function can be used in AutoMax Control Block tasks and UDC Control Block tasks.



Function

OUTPUT = TRUE when INPUT goes from off to on

Program Statement

CALL TRANSITION(INPUT = input@, OUTPUT = output@)

Inputs

I (INPUT) =

BOOLEAN signal input. This parameter must be specified. It must be specified as a variable name only (literal value not accepted).

Outputs

O (OUTPUT) =

BOOLEAN signal output. This parameter must be specified.