


## 5.0 ABSOLUTE VALUE

This function can be used in AutoMax Control Block tasks and UDC Control Block tasks.

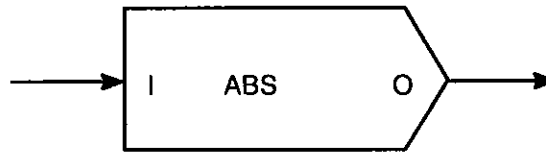

### Function

OUTPUT = | INPUT |

### Program Statement

```
CALL ABSOLUTE_VALUE(                                &  
    INPUT = input%,                                &  
    OUTPUT = output%)
```

### Inputs

I (INPUT) =

INTEGER signal input. This parameter must be specified as a variable name only (literal value not accepted).

### Outputs

O (OUTPUT) =

INTEGER signal output. This parameter must be specified.